


Keep graphic attached to upper bar.

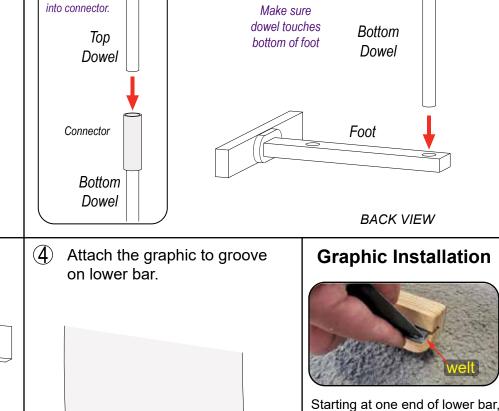


Connect top & bottom dowels, then insert bottom dowel into each foot.

Make sure

top dowel

is fully inserted

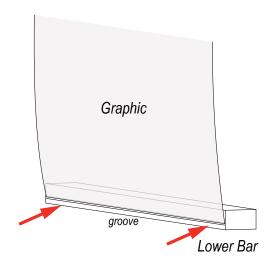

Fully press the silicone welt into the channel, moving across the lower bar from end to end. Once the welt is fully inserted, smooth out as needed.

insert silicone welt on back of

graphic into the front channel.



## Disassembly:

FRONT VIEW

1) Remove bottom silicone welt from groove of lower bar.

Graphic

Upper Bar

2) Roll the graphic around upper bar, *print side out*.

Upper Bar

Тор

Dowel

slot -

**BACK VIEW** 

3) Detach feet from lower bar & remove dowels.

FRONT VIEW