


Item	Qty.	Description
A	1	70”w x 24”d Table Top
B	1	24”w x 36”h Table Leg w/ S10
C	1	24”w x 36”h Table Leg w/ S10
D	1	63.094”w Z140 Horizontal Extrusion

- Steps:
- 1) Attach Table Top [A] to Table Legs [B,C] using roto cam locks.
See **Roto Cam Lock Connection** detail.
- 2) Connect extrusion [D] to S10 extrusions on Table Legs [B,C] as shown.

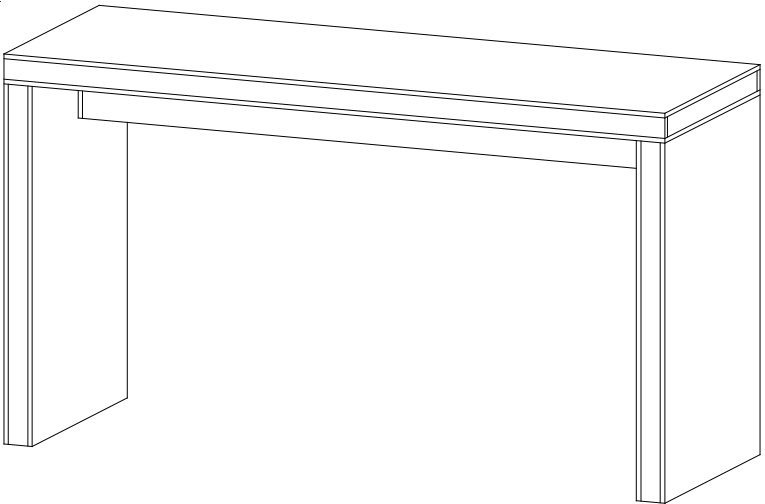


When assembled

* Roto Cam Lock Connection

Step 1

Step 2

Place hex tool in hole on side of panel. Rotate to activate lock & secure panels together.

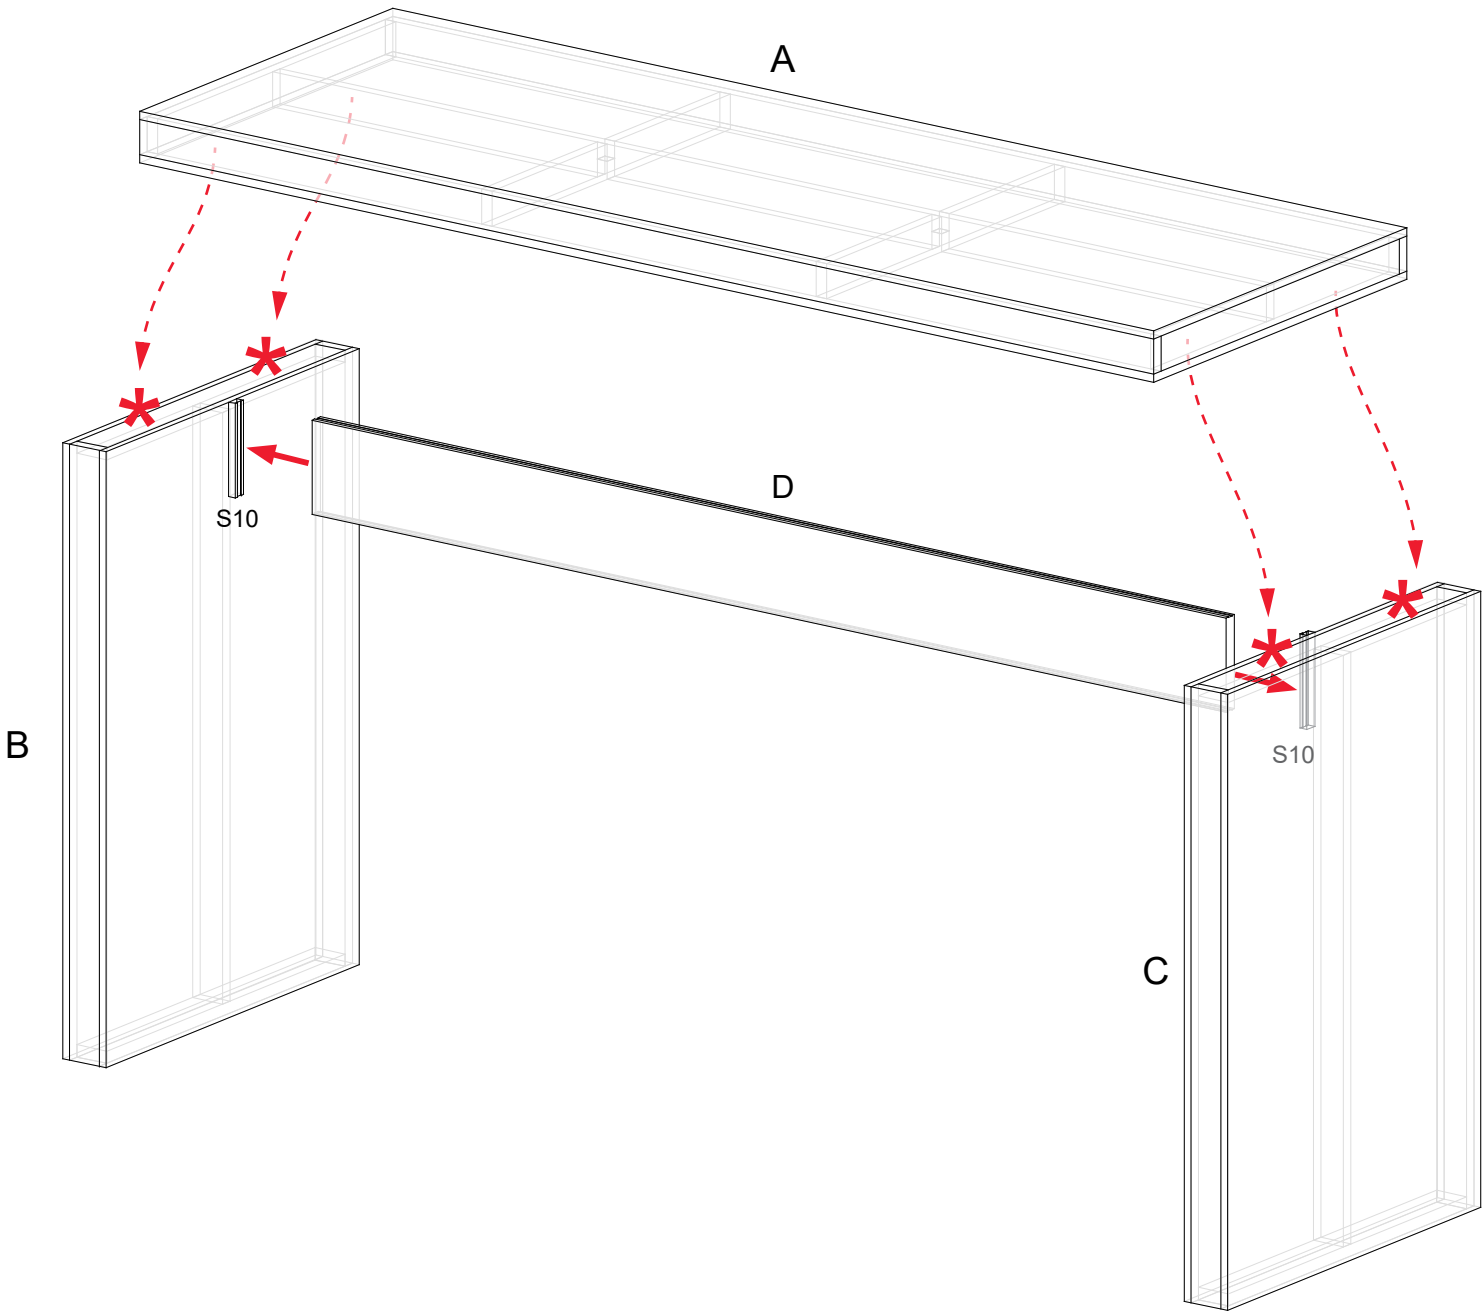

SETUP INSTRUCTIONS